



Z-Stuff for Trains
Making model railroading more fun




DZ-1075M TrackSide Momentary Power Sensor Instructions

This trackside sensor only needs the RED wire connected to power (12-18V AC) and the BLACK wire connected to common to operate. It has been tested in ALL lighting conditions from total darkness to direct sunlight with no problem. Place the sensor next to the track about 1-1/2" away from the outside rail. Facing the front of the sensor, the train is detected on the LEFT side. The sensor will not reach across more than one track. If more sensitivity is needed to detect black rolling stock, try rotating the sensitivity adjustment clockwise. For some rolling stock the sensor may need to be raised to sense the high riding cars. When the train passes the sensor, the LED in the cap will light until the train has passed. 4 seconds after the train passes, the LED will go out. When the LED is lighted the GRAY wire will momentarily turn on for 1 sec. and then will turn off. When the LED goes out (after 4 sec.), the WHITE wire will turn on for 1 sec. and then turn off. The outputs can directly handle nearly 1 Amp on each output. This means they can operate nearly any signal or accessory with lamps, solenoids, or unusual wiring that would otherwise require a relay. They are especially good for the AF semaphore with two solenoids.

OPTION A – The WHITE and GRAY wires are connected directly to the GREEN and RED wires of an MTH signal with the BLACK wire of the signal connected to common. The BLUE wire connects to ACC power. The MTH bridge and cantilever signals a typical examples. For these signals, (2) DZ-1075 will be required. One for each track.

OPTION B – If the optical sensor is covered with black tape, then the input (YELLOW) wire can be used to control the sensor. Connecting the input wire to an isolated rail will cause the sensor to change its two outputs and operate a typical LED or LAMP signal.

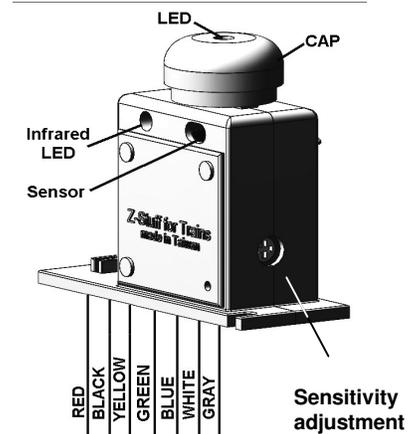

Wire Color	Function
RED	ACCESSORY POWER
BLACK	NEUTRAL or Common
YELLOW	INPUT (low → ON)
GREEN	OUTPUT (5VDC)
BLUE	ACC PWR OR COMMON
WHITE	TURNS ON for 1 sec. when train arrives
GRAY	TURNS ON for 1 sec. (4 sec) after train passes